


*Thank you for purchasing AUTEL diagnostic tool. Manufactured to a high standard, our tool will, if used according to these instructions and properly maintained, give you years of trouble-free performance.*

### Getting Started



**IMPORTANT:** Before operating or maintaining this unit, please read the quick guide and user manual carefully, pay extra attention to the safety warnings and precautions. Use this unit correctly and properly. Failure to do so may cause damage and/or personal injury and will void the product warranty.

1

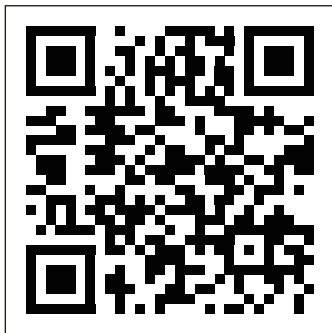


- Scan QR Code to visit our website at [www.autel.com](http://www.autel.com).
- Create an Autel ID and register the product with device's SN and password.

2




- Long press the Lock/Power button to turn on the Diagnostic Tablet.
- Connect the main cable's female adapter to the Diagnostic Tablet and tighten the captive screws.

3

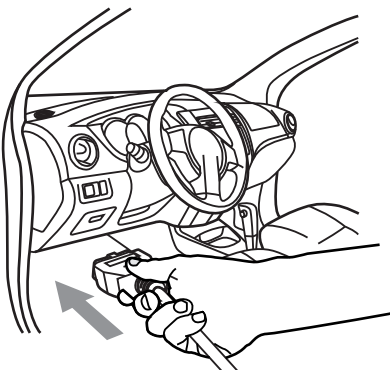

- Connect the main cable's 16-pin male adapter to the vehicle's DLC, which is generally located under the vehicle dash.
- Tighten the captive screws.

4

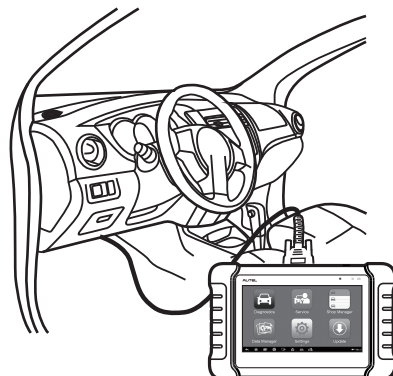

- Your Diagnostic Tablet is now ready for use as a diagnostic device.



Please download the **Maxi PC Suite** from [www.autel.com](http://www.autel.com) > *Support & Updates > Firmware & Downloads > Update Client, and install to your PC.*

## Software Update



**IMPORTANT:** Make sure the Diagnostic Tablet is connected to the Internet and the Tablet has sufficient battery or is connected to a power source.

- Tap the **Update** application button from the Diagnostics Job Menu and the Update screen displays.
- Check all available updates: a) if you want to update all the items, tap the **Update All** button; b) if you want to update one or some of the items, tap the **Update** button on the right column of the specific item(s).
- Tap **Pause** to suspend the updating process. Tap **Continue** to resume.
- When the updating process is completed, the software will be installed automatically. The previous version will be replaced.

## Wireless Data Printing

### Print via PC



**IMPORTANT:** Make sure the Diagnostic Tablet is connected to the same network with the computer, either via Wi-Fi or LAN, and the computer is connected to a printer.

- Run the **MaxiSys Printer** on the computer which is installed after the installation of **Maxi PC Suite**.
- Click **Test Print** to make sure the printer is working successfully.
- Tap **Print** on the toolbar of the Diagnostic Tablet. A temporary document will be created and sent to the computer.
  - If the **Auto Print** option in the MaxiSys Printer is selected, the MaxiSys Printer will print the received document automatically.
  - If the **Auto Print** option is not selected, click **Open PDF File** to view all the temporary files. Select the file(s) you want to print and click **Print**.

### Print via APP

If a Wi-Fi printer is available, please purchase a Wi-Fi printer APP and install it onto your Diagnostic Tablet. By a simple click on the **Print** button of a saved file on the Diagnostic Tablet, the file will be printed automatically.

For service and support, please contact us.

<http://pro.autel.com> / [www.autel.com](http://www.autel.com) / [support@autel.com](mailto:support@autel.com)  
0086-755-86147779 (China HQ) / 1-855-288-3587/1-855-AUTELUS (North America)  
0049 (0) 61032000522 (Europe) / (+507) 308-7566 (South America) / 03 9480 2978 / +61 476293327 (Australia)

© Autel Intelligent Technology Corp., Ltd. All Rights Reserved.